


DESPIECE BM-68

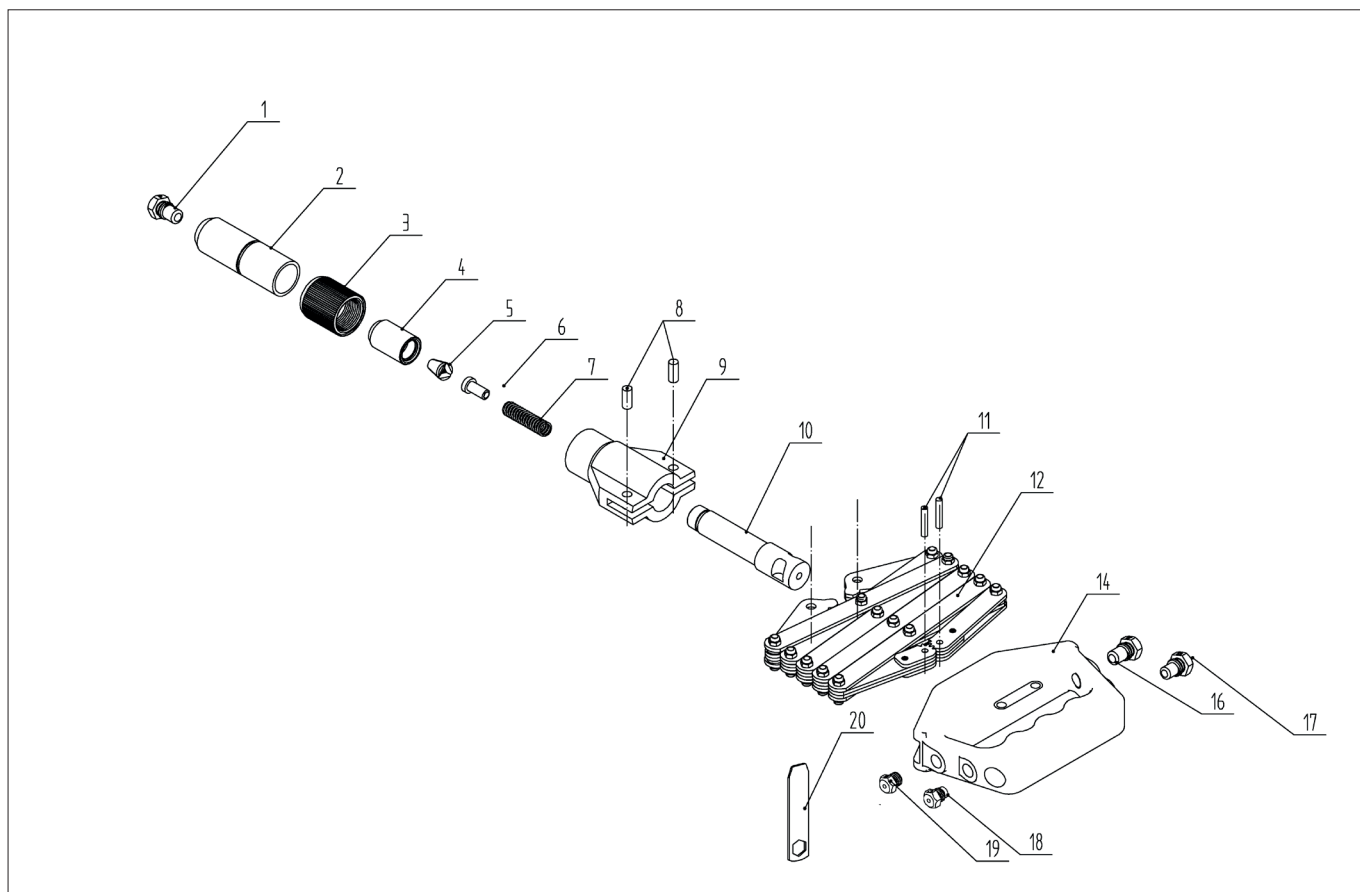

BOQUILLA N°	ALU/ACERO ALU/INOX	ALU/ALU	ACERO	INOX	COBRE	HARDGRIP
-------------	--------------------	---------	-------	------	-------	----------

	d1	d1	d1	d1	d1	d1
B	3,0 - 3,2	3,0 - 3,2	3,0 - 3,2		3,0 - 3,2	3,2 acero
C	4,0	4,0	4,0	3,0 - 3,2 4,0	4,0	3,2 inox
D	4,8 - 5,0					4,0
E	6,0 *	4,8	4,8-5,0	4,8-5,0	4,8	4,8
F	6,4*		6,0-6,4*	6,0-6,4*		6,0*

N°	CÓDIGO	DENOMINACIÓN
----	--------	--------------

1	05BM0068001	BOQUILLA F 6.4
2	05BM0068002	PORTA BOQUILLA
3	05BM0068003	TUERCA AJUSTE
4	05BM0068004	PORTA MORDAZAS
5	05BM0068005	JUEGO MORDAZAS
6	05BM0068006	EMPUJADOR MORDAZAS
7	05BM0068007	MUELLE EMPUJADOR MORDAZAS
8	05BM0068008	PASADORES CUERPO
9	05BM0068009	CUERPO
10	05BM0068010	EJE PRINCIPAL
11	05BM0068011	PASADORES FUELLE
12	05BM0068012	FUELLE
14	05BM0068014	EMPUÑADURA
16	05BM0068016	BOQUILLA B 3.2
17	05BM0068017	BOQUILLA C 4.0
18	05BM0068018	BOQUILLA D 4.8/5.0
19	05BM0068019	BOQUILLA E 6.0
20	05BM0068020	LLAVE BOQUILLAS

*Para un uso prolongado se recomienda utilizar la remachadora BM-164