




DESPIECE BNT-1, BNT-2 y BNT-3

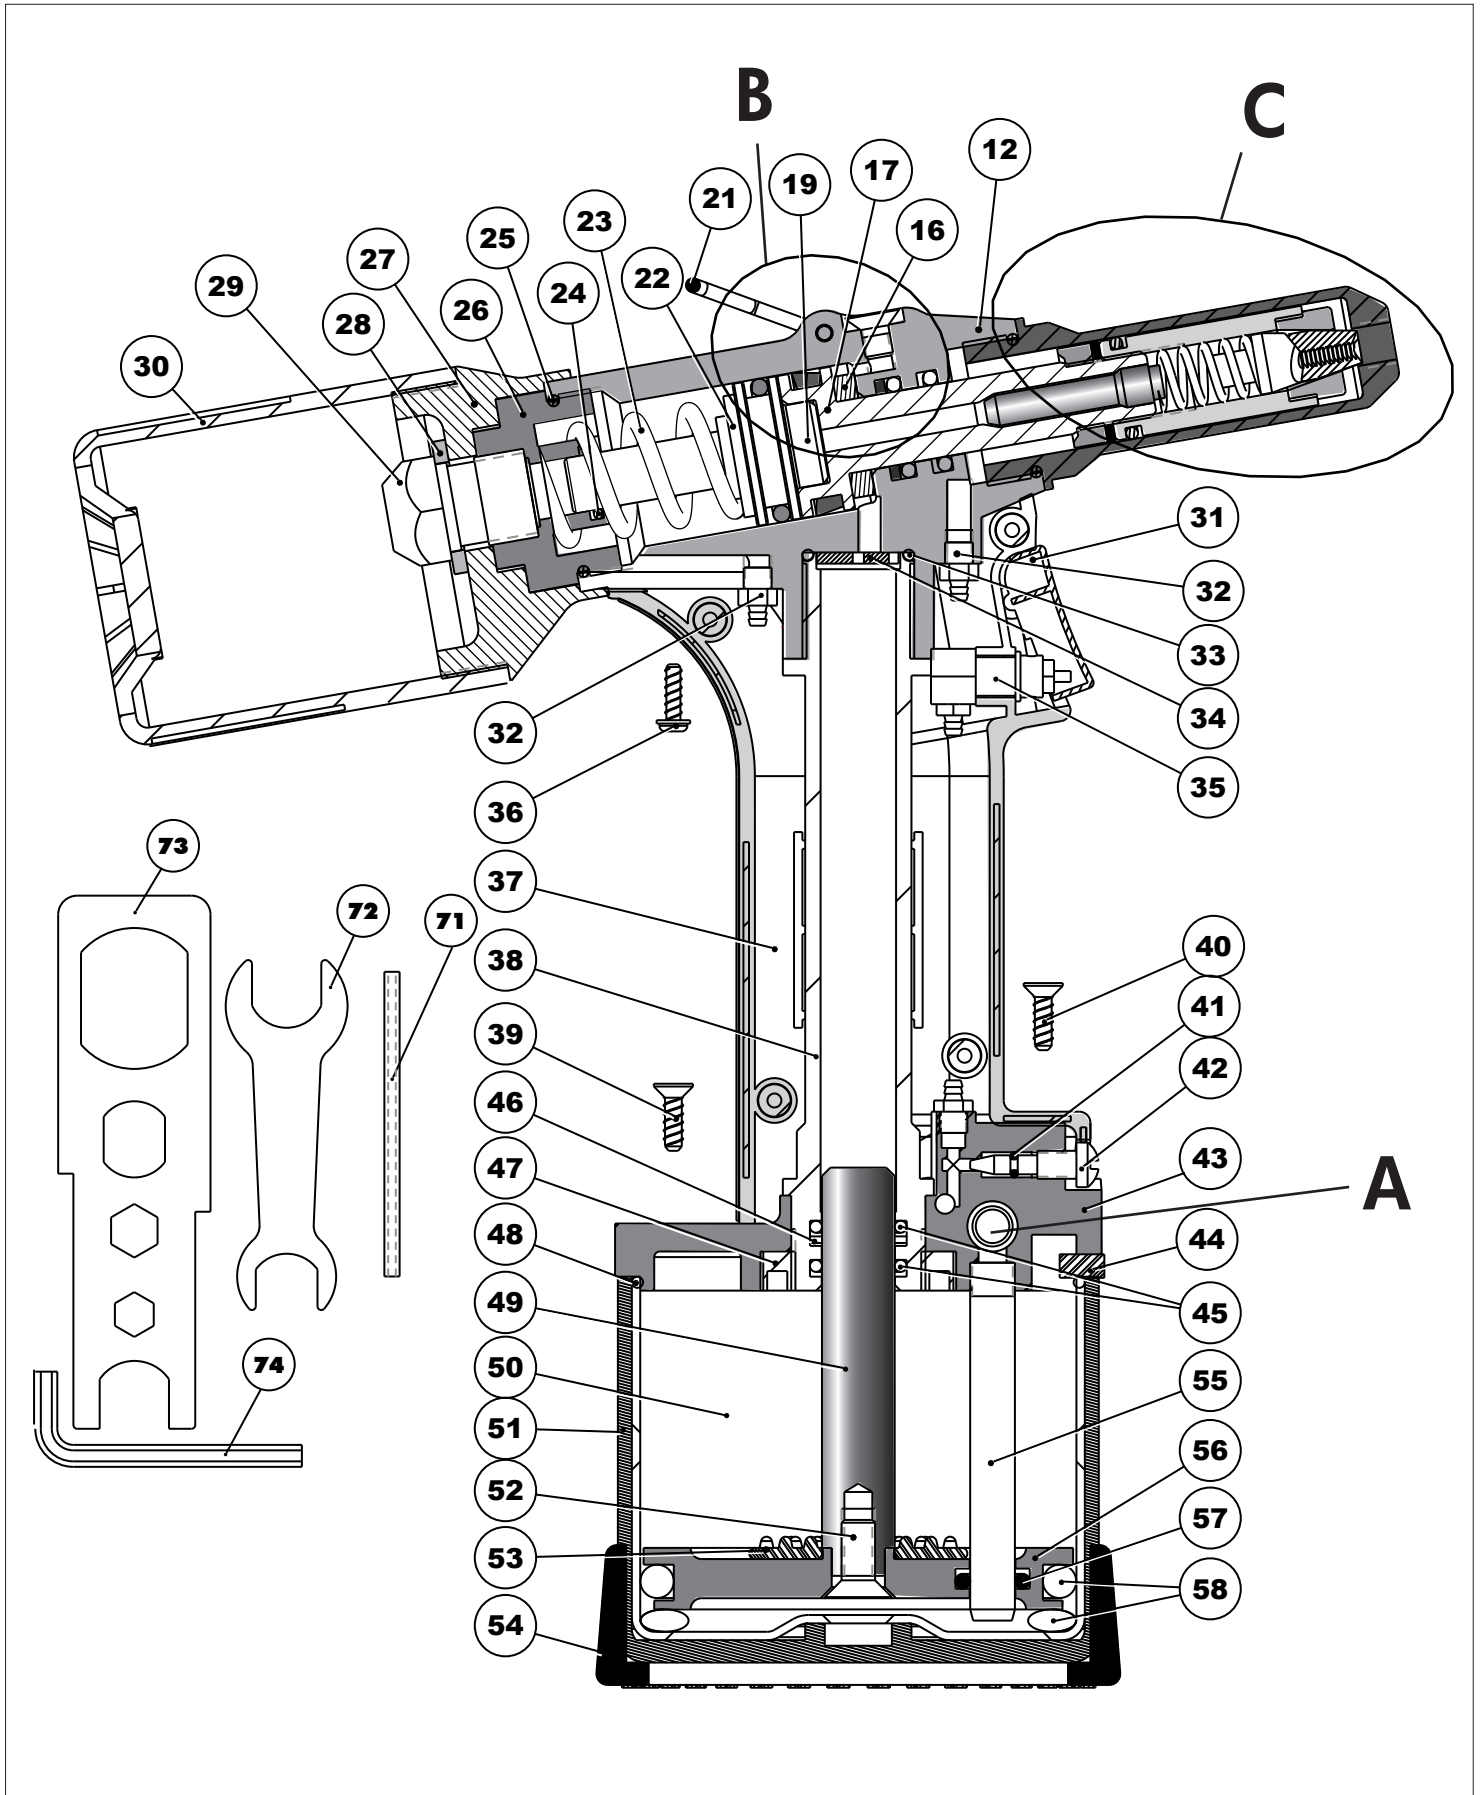


A

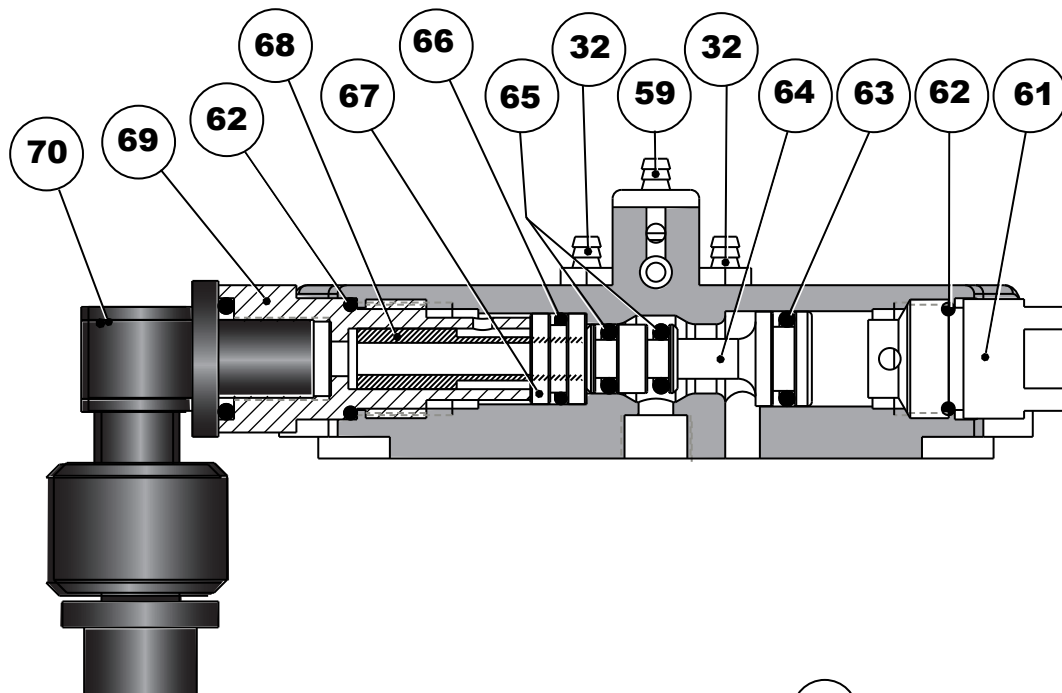

B

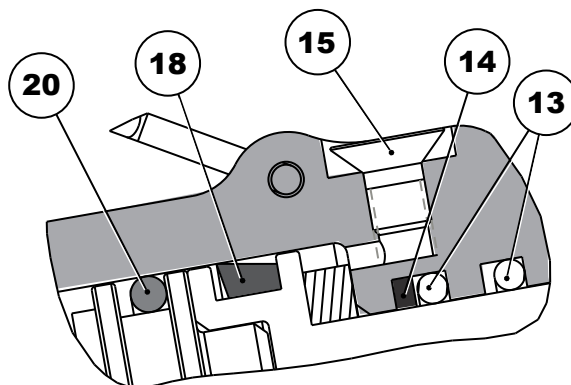

C

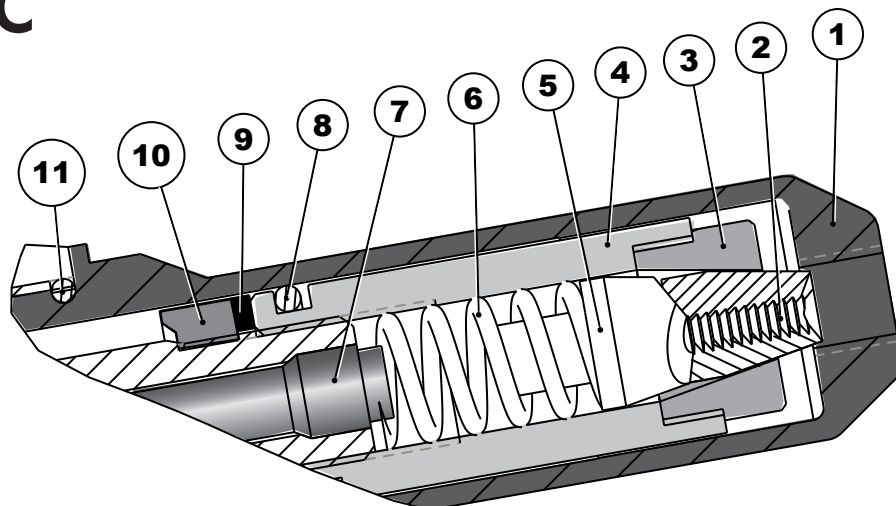

BOQUILLA Nº	ALU/ACERO ALU/INOX	ALU/ALU	ACERO	INOX	COBRE	HARDGRIP	ESTRUCTURAL
730	3,0 - 3,2	3,0 - 3,2	3,0 - 3,2		3,0 - 3,2	3,2 acero	
740	4,0	4,0	4,0	3,0 - 3,2 4,0	4,0	3,2 inox	
750	4,8 - 5,0					4,0	
760	6,0	4,8	4,8 - 5,0	4,8 - 5,0	4,8	4,8	

OPCIONAL

782							4,8
754	4,8 - 5,0 cabeza Ø16						
765		5,2 S.TREBOL *					
766		6,4 S.TREBOL *					
753	4,8 - 5,0 vástago largo						
724	2,4	2,4		2,4			
774	4,8 - 5,0 cabeza Ø14 panel compositor						
776	4,8 - 5,0 cabeza Ø16 panel compositor						
724	2,4	2,4		2,4			

*Mordazas 05BM0001004

Nº	CÓDIGO	DENOMINACIÓN
1	05BNT000357	PORTA BOQUILLA
2	05BNT001001	JUEGO MORDAZAS PEQUEÑAS
3	05BNT000346	PARTE CONICA PORTAMORDAZAS
4	05BNT000348	PARTE CILINDRICA PORTAMORDAZAS
5	05BNT000351	EMPUJADOR MORDAZAS
6	05BNT000349	MUELLE MORDAZAS
7	05BNT000326	INSERTO EJE TRACCION
8	05BNT000386	JUNTA TORICA PORTAMORDAZAS
9	05BNT000363	ARANDELA PORTAMORDAZAS
10	05BNT000350	CONTRATUERCA PORTAMORDAZAS
11	05BNT000390	JUNTA TORICA PORTABOQUILLA
12	05BNT000313	CAMISA TRACCION
13	05BNT000378	JUNTA TORICA CAMISA TRACCION
14	05BNT000377	ANILLO APOYO CAMISA TRACCION
15	05BNT000410	TORNILLO CIERRE ACEITE
16	05BNT000393	ANILLO NYLON TOPE EJE TRACCION
17	05BNT000318	EJE TRACCIÓN PARTE DELANTE
18	05BNT000376	EMPAQUETADURA EJE TRACCION
19	05BNT000319	EJE TRACCIÓN PARTE TRASERA
20	05BNT000385	JUNTA TORICA EJE TRACCION
21	05BNT000367	ANILLA DE COLGAR
22	05BNT000374	GUIA MUELLE CAMISA DE TRACCION
23	05BNT000371	MUELLE CAMISA TRACCION
24	05BNT000388	JUNTA TORICA INTERIOR TAPON CAMISA TRACCION
25	05BNT000389	JUNTA TORICA EXTERIOR TAPON CAMISA TRACCION
26	05BNT000361	TAPON CAMISA DE TRACCION
27	05BNT000401	ADAPTADOR RECOGE VASTAGOS
28	05BNT000364	ARANDELA EXPULSOR VÁSTAGOS
29	05BNT000365	EXPULSOR VÁSTAGOS
30	05BNT000402	TUBO RECOGE VASTAGOS
31	05BNT000411	GATILLO INTERRUPTOR
32	05BNT000403	EMPALME TUBO AIRE
33	05BNT000391	JUNTA TORICA EXTERIOR CILINDRO OLEODINAMICO
34	05BNT000325	ARANDELA-VALVULA CILINDRO OLEODINAMICO
35	05BNT000412	CONJUNTO INTERRUPTOR
36	05BNT000405	TORNILLOS CACHAS
37	05BNT000366	JUEGO CACHAS
38	05BNT000324	CILINDRO OLEODINAMICO
39	05BNT000406	TORNILLO VASO Ø4 CORTO
40	05BNT000407	TORNILLO VASO Ø4 LARGO
41	05BNT000399	JUNTA EJE CORTE ASPIRACION
42	05BNT000398	EJE CORTE ASPIRACION
43	05BNT000308	TAPA SUPERIOR VASO

Nº	CÓDIGO	DENOMINACIÓN
44	05BNT000331	FILTRO SILENCIADOR TAPA
45	05BNT000379	JUNTA INTERIOR CILINDRO OLEODINAMICO
46	05BNT000380	ANILLO APOYO JUNTA CILINDRO OLEODINAMICO
47	05BNT000343	TUERCA CIERRE CUELLO-TAPA
48	05BNT000392	JUNTA CIERRE TAPA
49	05BNT000369	EJE EMBOLO VASO
50	05BNT000301	INTERIOR VASO ALUMINIO
51	05BNT000302	EXTERIOR VASO PLASTICO
52	05BNT000409	TORNILLO EMBOLO VASO
53	05BNT000404	TOPE GOMA EMBOLO VASO
54	05BNT000341	PROTECCION INFERIOR
55	05BNT000396	TUBO AIRE VASO
56	05BNT000344	EMBOLO VASO NEUMATICO
57	05BNT000381	JUNTA TORICA EMBOLO VASO CON TUBO AIRE
58	05BNT000382	JUNTA TORICA EMBOLO VASO
59	05BNT000418	EMPALME TUBO AIRE ASPIRACION
61	05BNT000339	VALVULA DE SEGURIDAD
62	05BNT000336	JUNTA TORICA TAPON ENTRADA AIRE
63	05BNT000330	JUNTA TÓRICA GRANDE DE LA VÁLVULA
64	05BNT000328	PISTÓN VÁLVULA
65	05BNT000329	JUNTA TÓRICA PEQUEÑA DE LA VÁLVULA
66	05BNT000333	JUNTA TORICA ARANDELA CIERRE VALVULA
67	05BNT000332	ARANDELA CIERRE VÁLVULA
68	05BNT000334	VALVULA CIERRE AIRE
69	05BNT000335	TAPON ENTRADA AIRE
70	05BNT000416	RACOR ENTRADA DE AIRE
71	05BNT000337	TUBO AIRE Ø4
72	05BNT000414	LLAVE FIJA 16-18
73	05BNT000413	LLAVE PORTABOQUILLAS NEUMATICAS
74	05BNT000415	LLAVE ALLEN
	05BM0000730	BOQUILLA 730
	05BM0000740	BOQUILLA 740
	05BM0000750	BOQUILLA 750
	05BM0000760	BOQUILLA 760
OPCIONAL		
	05BM0000724	BOQUILLA 724
	05BM0000782	BOQUILLA 782
	05BM0000754	BOQUILLA 754
	05BM0000765	BOQUILLA 765
	05BM0000766	BOQUILLA 766
	05BM0000753	BOQUILLA 753
	05BM0000724	BOQUILLA 724
	05BM0000774	BOQUILLA 774 panel compositor
	05BM0000776	BOQUILLA 776 panel compositor