


# BREAKDOWN HT-30

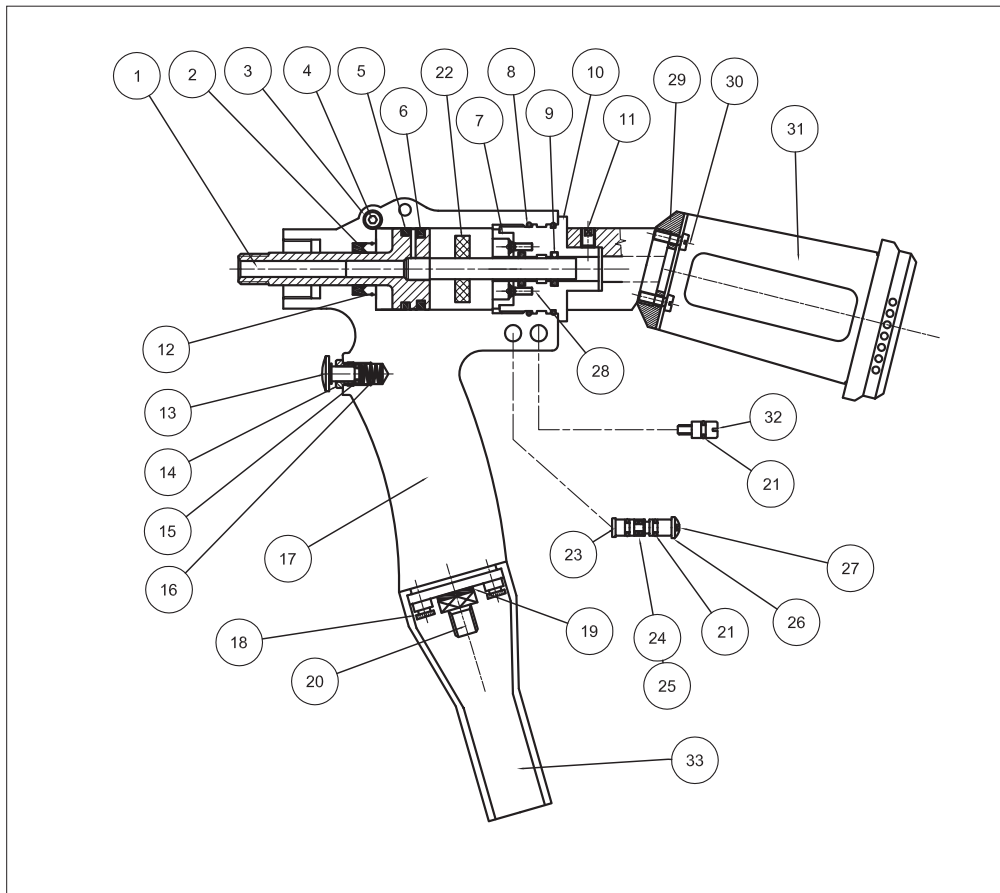

REFERENCE	DESCRIPTION
05HT30R000	KIT RIVETING Ø4,8 STANDARD
05HT30R000	KIT RIVETING Ø6,5 STANDARD
05HT30R000	KIT RIVETING Ø4,8 STRUCTURAL
05HT30R000	KIT RIVETING Ø6,5 STRUCTURAL
05HT30R000	KIT RIVETING Ø4,8 HARDLOCK
05HT30R000	KIT RIVETING Ø6,5 HARDLOCK
05BM3002023	KIT RIVETING Ø4,8 UNILOCK
05BM3002024	KIT RIVETING Ø6,5 UNILOCK
05BM3002021	KIT RIVETING Ø4,8 BRALOCK
05BM3002022	KIT RIVETING Ø6,5 BRALOCK

N°	REFERENCE	DESCRIPTION
1	05HT3000001	PISTON
2	05HT3000002	PACKING
3	05HT3000003	OIL WASHER
4	05HT3000004	BLEED PLUG
5	05HT3000005	OIL SEAL
6	05HT3000006	AIR JOINT
7	05HT3000007	STROKE LIMIT
8	05HT3000008	O-RING
9	05HT3000009	O-RING
10	05HT3000010	BACKGROUND
11	05HT3000011	PRISONER
12	05HT3000012	GROUP
13	05HT3000013	BUTTON
14	05HT3000014	NUT
15	05HT3000015	O-RING
16	05HT3000016	DOCK
17	05HT3000017	MAIN BODY
18	05HT3000018	CAPSULE
19	05HT3000019	COPPER WASHER
20	05HT3000020	UNION 1/4
21	05HT3000021	O-RING
22	05HT3000022	SHOCK ABSORBER
23	05HT3000023	SUCTION BUTTON
24	05HT3000024	O-RING
25	05HT3000025	RING
26	05HT3000026	GROUP
27	05HT3000027	SCREW
28	05HT3000028	SCREW
29	05HT3000029	ADAPTER
30	05HT3000030	SCREW
31	05HT3000031	MANDREL COLLECT
32	05HT3000032	REGULATOR
33	05HT3000033	CONNECTION SLEEVE