


DESPIECE TR-312

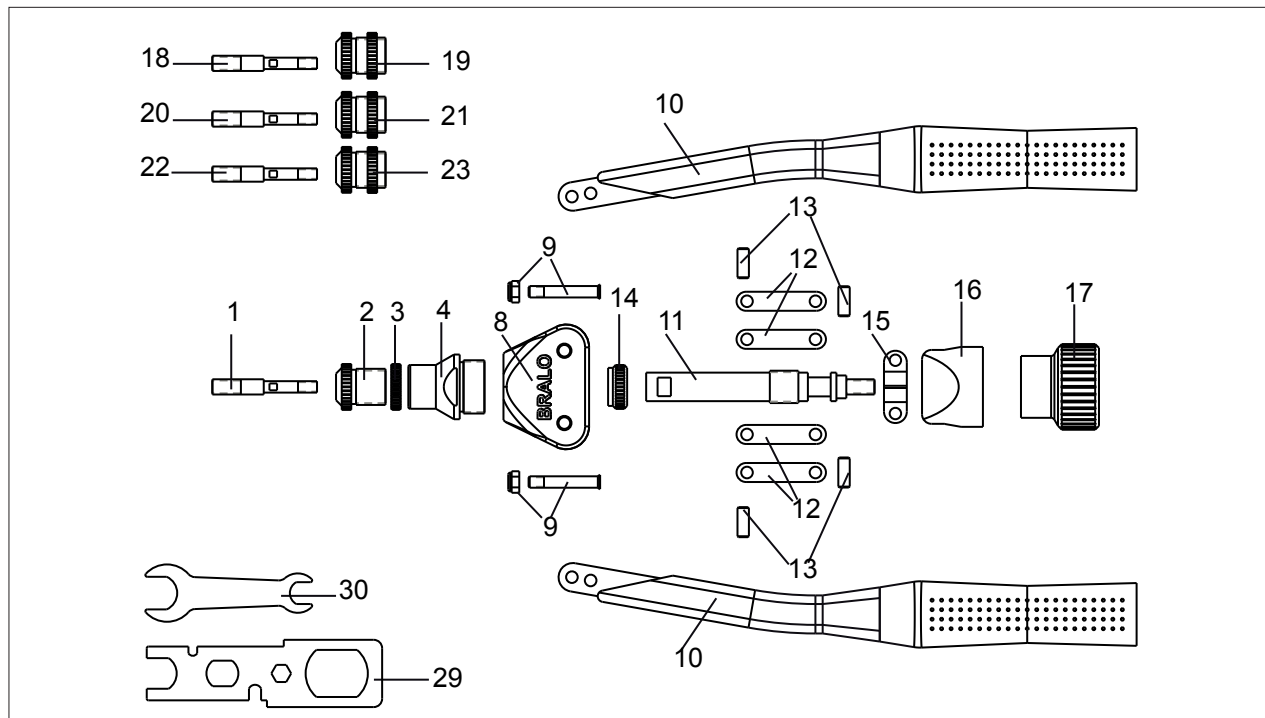

N°	CÓDIGO	DENOMINACIÓN
1	05TR0000226	Macho M-6 TR-312
2	05TR0000227	Boquilla M-6 TR-312
3	05TR0000204	Contratuercas boquilla
4	05TR0000202	Porta boquillas TR-312
8	05BM0000204	Cuerpo principal
9	05BM0000205	Tornillo pasador + tuerca
10	05BM0000206	Mango
11	05TR0000215	Prolongador
12	05BM0000209	Pletinas
13	05BM0000207	Pasador
14	05TR0000214	Tuerca regulacion eje
15	05BM0000210	Ancla máquina
16	05BM0000211	Porta colector

N°	CÓDIGO	DENOMINACIÓN
17	05TR0000212	Pomo
18	05TR0000228	Macho M-8 TR-312
19	05TR0000229	Boquilla M-8 TR-312
20	05TR0000230	Macho M-10 TR-312
21	05TR0000231	Boquilla M-10 TR-312
22	05TR0000232	Macho M-12 TR-312
23	05TR0000233	Boquilla M-12 TR-312
29	05BM0000100	Llave boquillas y portaboquillas
30	05BM0000109	Llave fija 12-18