
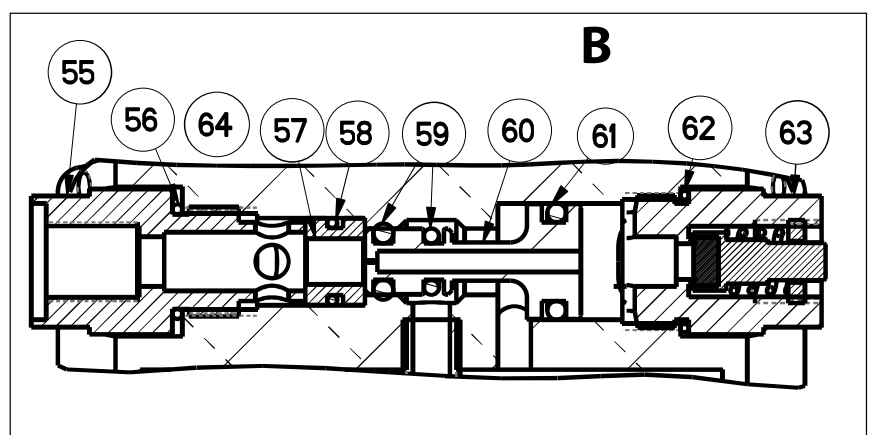
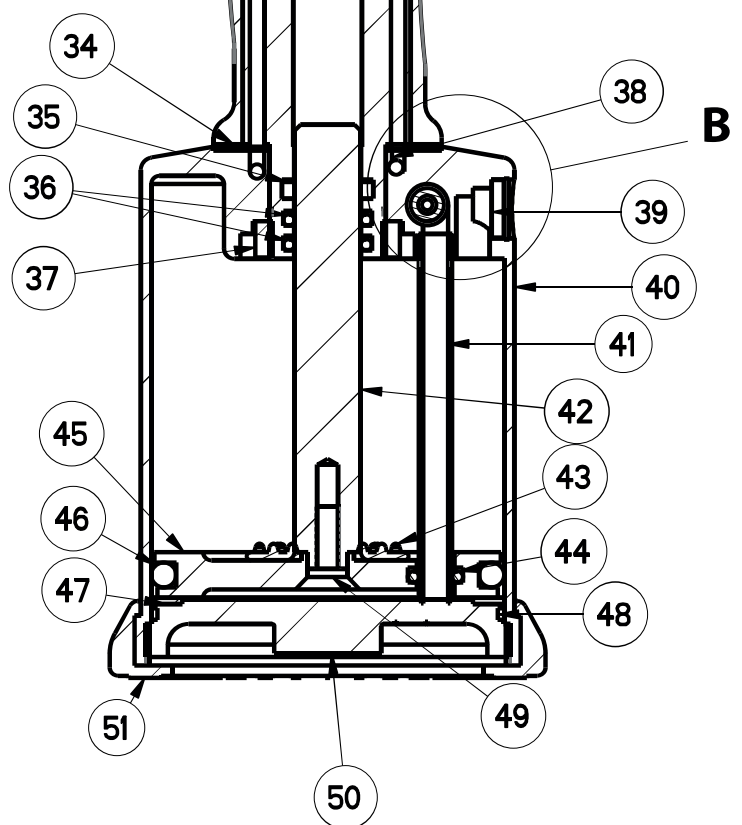
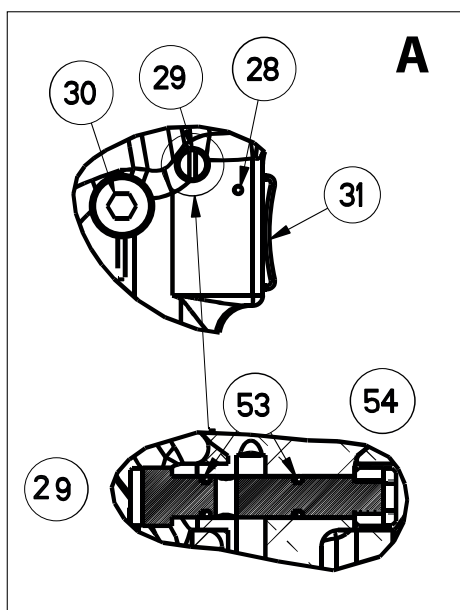
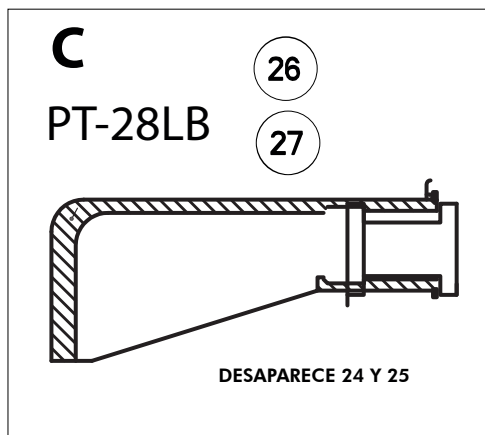


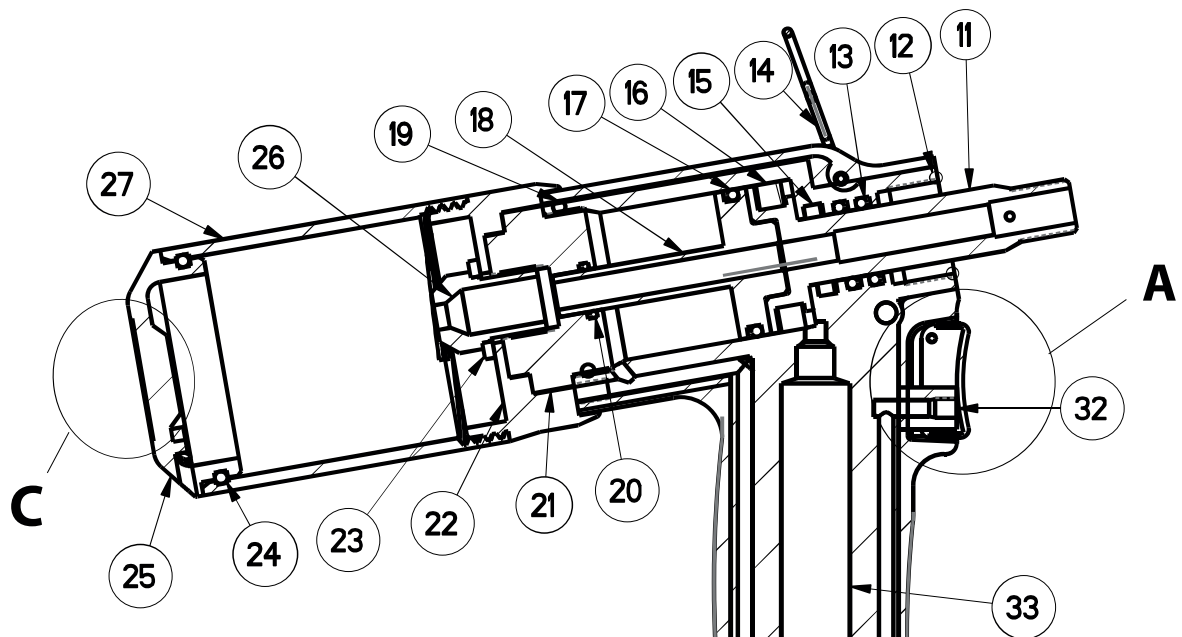

OPTIONAL

N°	DESCRIPTION	KIT 4.8 UNILOCK	KIT 4.8 BRALOCK	KIT 6.4 UNILOCK	KIT 6.4 BRALOCK
	KIT	005BM3002023	05BM30002021	05BM3002024	05BM002022
1	HOLDER AND NOSEPIECE ASSEMBLY	05BM3002023-1	05BM3002021-1	05BM3002024-1	05BM3002022-1
2	NOSEPIECE	05BM3002023-2	05BM3002021-2	05BM3002024-2	05BM3002022-2
3	NOSEPIECE HOLDER	05BM3002023-3	05BM3002021-3	05BM3002024-3	05BM3002022-3
4	JAWS HOLDERS	05BM3002023-4	05BM3002021-4	05BM3002024-4	05BM3002022-4
5	JAWS ASSEMBLY	05BM3002023-5	05BM3002021-5	05BM3002024-5	05BM3002022-5
6	JAWS HOLDERS EXTENSION	05BM3002023-6	05BM3002021-6	05BM3002024-6	05BM3002022-6
7	GASKET	05BM3002023-7	05BM3002021-7	05BM3002024-7	05BM3002022-7
A	NUT	05BT2000201	05BT2000201	05BT2000201	05BT2000201
B	CONNECTOR	05HT3000056	05HT3000056	05HT3000056	05HT3000056
C	NOSEPIECE HOLDER	05BT2000203	05BT2000203	05BT2000203	05BT2000203

N°	REFERENCE	DESCRIPTION
11	05PT0000014	FRONT DRIVE AXLE
12	05PT0000076	NOZZLE HOLDER SEAL
13	05PT0000075	BODY / AXLE SEAL
14	05PT0000050	HANGING RING
15	05PT0000074	BODY / AXLE PACKING
16	05PT0000073	AXLE PACKING
17	05PT0000072	AXLE / BODY SEAL
18	05PT0000015	REAR DRIVE AXLE
19	05PT0000071	PLUG / BODY SEAL
20	05PT0000092	PLUG / DRIVE AXLE SEAL
21	05PT0000024	BODY AXLE PLUG
22	05PT0000028	BODY PLUG COVER
23	05PT0000057	EJECTOR WASHER
26	05BM3002111	RUBBER PROTECTION
27	05PT0000037G	REFLECTOR ADAPTOR
28	05PT0000026	TRIGGER SHAFT PIN
29	05PT0000027	SUCTION CUT-OFF SHAFT
30	05PT0000051	OIL SCREW
31	05PT0000025	TRIGGER
32	05PT0000045	DRIVE SHAFT
33	05PT0000005	MAIN BODY
34	05PT0000070	BODY / GLASS GASKET
35	05PT0000081	SUPPORT RING
36	05PT0000080	BODY / PLUNGER SHAFT GASKET
37	05PT0000006	BODY/COVER UNION NUT
38	05PT0000056	POSITIONER
39	05PT0000054	SILENCER
40	05PT0000003	CUP LID
41	05PT0000035	BRASS TUBE
42	05PT0000022	PISTON SHAFT
43	05PT0000044	PISTON RUBBER STOP
44	05PT0000091	PISTON-TUBE SEAL
45	05PT0000019	PISTON
46	05PT0000083	PISTON SEAL
47	05PT0000039	PISTON LOWER STOP
48	05PT0000085	COVER SEAL
49	05PT0000043	PISTON-PISTON SCREW
50	05PT0000017	CUP CLOSING LID
51	05PT0000047	PROTECTION RUBBER
53	05PT0000090	SUCTION SEAL SEAL
54	05PT0000052	AIR CUT-OFF SHAFT GROUP
55	05PT0000013	AIR INLET PLUG
56	05PT0000088	SEAL WASHER SEAL
57	05PT0000040	VALVE SEAL WASHER
58	05PT0000041	O-RING
59	05PT0000086	VALVE SEAL
60	05PT0000011	ACTUATOR VALVE
61	05PT0000087	VALVE SEAL
62	05PT0000089	VALVE/SAFETY PLUG SEAL
63	05PT0000008	SAFETY VALVE ASSEMBLY
	05BT2000041	KEY 12-17
	05BM0000099	FITTING

OPTIONAL

REFERENCE	DESCRIPTION
-----------	-------------

OUTIL CHANGE KIT 05PT0000101 INCLUDES:

05PT0000093	OIL FILLING TOOL
05PT0000094	BRAKE AXLE SCREW
05PT0000095	SYRINGE
05BNT000420	OIL CAN